AT5030A





Product highlights ▼

- * Linux operation system
- * ARM cpu
- * Digital signal and processor
- * Continuous working 10000 hours above
- * Energy saving design
- * High penetration
- *Good quality images
- * One key turn off



Dimensional Drawing

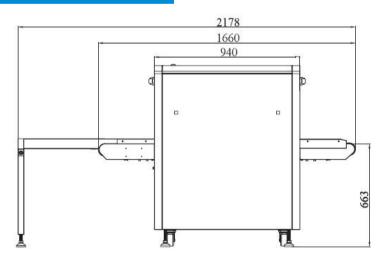

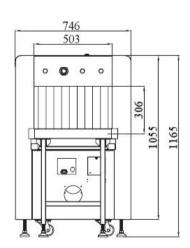

Important Sizes:

Product Size: 2178* 746 * 1160mm (L \times W \times H) Tunnel Size: 503* 306mm (width \times height)







General Specifications

Wire Resolution Typical AWG40 Penetration resolution Typical AWG36

Spatial resolution Vertical:1.0mm, horizontal:1.0mm

Penetration Typical 8mm

Resolution of organic matter

Grayscale and mixture resolution 1-40mm

Resolution of inorganic objects Effective material resolution

≤3.0µSv (uGy) X-Ray dosage each inspection $\leq 1.0 \mu Sv /h(uGy/h)$ Boundary Leakage

<60dB S/N ratio 0.2m/s Conveyor speed 100kg Conveyor max load 0.5KW Power consumption

Meet the requirements of GB15208.1-2005 Safety performance requirements

Meet the requirements of GB15208.1-2005 **EMC** requirements

Meet the requirements of GB15208.1-2005 Electrical safety Meet the requirements of GB15208.1-2005 Environmental applicability

≤5.0mA

Leakage current

Guarantee ASA/ISO1600 Film Film Safety

260kg Weight

Operation temperature/Humidity 0°C-40°C/0%-90% Storage temperature/Humidity -20℃-60℃ /10%-90% Atmospheric pressure 86kPa-106kPaAC

220V(±10%-15%)50±3Hz **Operation Power**

LINUX Operation system

General Specifications

X ray generator 80KV, oil cooling, from bottom to top

Electric roller DC


Operating Linux system, memory 2G, storage 8G


21.5" LED screen, resolution: 1920*1080 pixels Monitor

NO Operation console

Scanned images



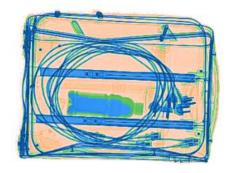

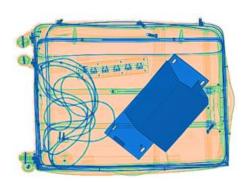



Functional characteristics

Ray source setting

Power-on self-test With the function of fault self-check, automatically judge the fault and prompt the fault code information in time.

Image processing 1-64times enlargement continuity.

With the function of Color/BW, negative, high/low penetration, organic/inorganic stripping,

general enhancement, and pseudo color, etc.

Image Recall 30 preceding images recallable.

The number of images stored Up to 10,000 images stored automatically.

Real-time curve The real-time curve can be used to detect whether the acquisition system and components work normally.

Time setting System time can be set

Probe setting It can realize the manual deletion of the low and low energy detection board dead pixels,

and display the deleted dead pixels in the display area.

Alarm system The alarm function can be activated and deactivated, and the alarm type of the alarm box,

sound and light alarm can be selected, and the sensitivity, minimum absorption rate,

maximum absorption rate, and alarm duration can be set.

Troubleshooting It can realize whether the components such as the entrance and exit light barrier, side panel switch, emergency

stop switch and light source are normal, and display the standard value and current value of the detection voltage

There are two source and analog source control modes, the source parameters of the digital source can be set.

Image setting The drum running control direction and the image display moving direction can be set.

Software registration It can realize software registration function and has serial number, registration code,

registration status and system time information display.

User login Log in by entering different user name and passwords, only when logging in can you make other settings.

User management You can add, delete, edit the user name and password, set the user level to restore the deleted user.

Authority management Different default permissions can be set according to user level.

About The version and device number can be displayed.

TIP report

The report can be generated by the tip operation after the tip insertion function is turned on, and the

content of the report: user name, number of tip insertions, number of tags, false positive rate,

probability of detection, probability of false positives.

Tip management It can be set to enable and disable the insertion of dangerous goods, and can set the identification time,

Prompt time, insertion frequency, proportion of single items inserted into dangerous goods, add tip files

and delete files.

Document management It can query, open, and export the checked image.

Function setting

It can set log level, save the file time, whether to open the training function and setting the smart roller.

Data setting

Display system working hours, the total working hours of the ray source, the total number of system

baggage and packages, and the total number of baggage packages this time, and clear the above data.

System parameter setting It can select the exported data, pictures, and backup directory, select and adjust the motor type, detector

type, whether to enable the debug mode, model, and gain, enter the corresponding IP address on network connection to realize sharing function, and have corresponding software to achieve system upgrade.

Compliance

*ISO19001; SO14001; ISO27001; OHSMS18001; CE, ROHS, FCC, REACH, USA, FDA

International *Health Inspection Report

National (China) *Computer Software Copyright Registration Certificate


*Software Product Registration Certificate

*Radiation Safety Certificate from Ministry of Public Security

*Quality Certification from Safety and Police Electronic Products Quality Inspection Center

*Design pantent certification

SAFEWAY INSPECTION SYSTEM LIMITED



Mobile&Whatsapp: + 86- 136 7021 3490 Skype: sophia.xiong8105

Email: sophia@safeway-system.com Website: www.safeway-system.com

